Swan

designed for life

Potato Masher & Hand Blender

Model: SP10090 (all colours)

Helpline

01733 404703

v1.0

SP10090_IM.indd 1 17/09/2014 10:56

IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

When using any electrical appliance, basic safety precautions should always be followed including the following:

- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.

SP10090_IM.indd 2 17/09/2014 10:56

IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- Do not carry the appliance by the power cord.
- Do not leave the appliance unattended during use. Always unplug the unit when not in use or before cleaning.
- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- Ensure that the unit is switched off after use.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentions precautions and instructions, could affect the safe operation of this product.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system
- This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments, farm houses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
- DO NOT blend hot oil or meat
- Take great care when handling the blade
- Do not continuously operate the mixer too long. The motor may overheat. If the surface of the blender has been very hot, it may need time to cool down. After reducing to room temperature, the blender can be operated again. Avoid operating without load for long periods as the bearings could overheat.

CAUTION: DO NOT IMMERSE THE MOTOR UNIT IN WATER

TECHNICAL DATA

Description: Potato Masher & Hand Blender
Model: SP10090N
Input Voltage: 220-240V
Frequency: 50/60Hz
Power consumption: 300 Watts

SP10090_IM.indd 3 17/09/2014 10:56

HOW TO USE

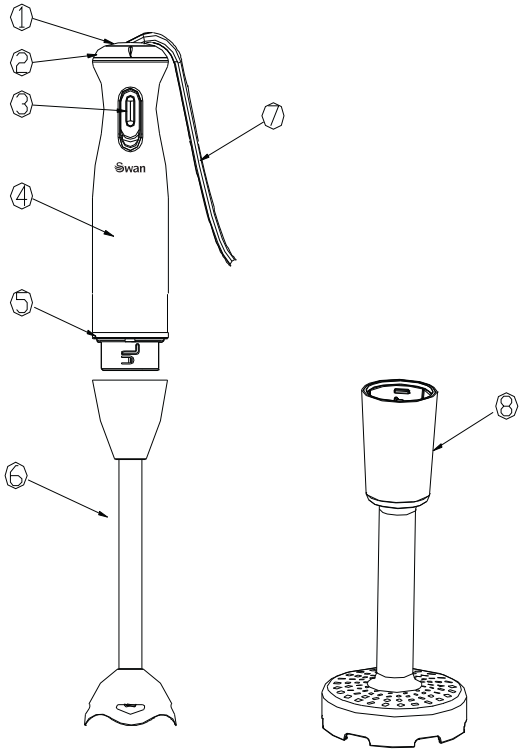

BEFORE FIRST USE

Carefully unpack the product and remove all packaging materials. Refer to the diagram on the left and practice assembling and disassembling your blender/ masher

PARTS

1. Top Cover
2. Speed Adjuster
3. Switch Button
4. Motor unit
5. Main Body Decorative Ring
6. Blender Shaft (removable)
7. Power Cord
8. Potato Masher Shaft (removable)

OPERATION GUIDELINES

1. Clean the Blender Shaft and Potato Masher attachments on warm soapy water. Rinse and dry thoroughly. TAKE EXTRA CARE WHEN HANDLING THE BLADES. THEY ARE VERY SHARP
2. Fit the motor unit (4) inside the blender shaft (6), turn and lock until you hear a slight click. The marks on the motor unit and blender shaft should now be aligned with each other. If this is the case, the blender shaft is locked correctly
3. Check if the power cord is not damaged .
4. Make sure your electricity supply is the same as the one shown on the motor unit.
5. Plug in. Hold the motor unit firmly.
6. Switch the appliance on by pressing the Low or High speed button.
7. Immerse the blade guard completely in the ingredients.
8. Blend the ingredients by moving the appliance slowly up and down and in circles.

SP10090_IM.indd 4 17/09/2014 10:56

HOW TO USE

9. After you have completed blending, Release the switch button, then unplug from outlet.
10. **Warning**: 10 seconds continuous operating time is usually more than enough for blending applications
11. If your blender gets blocked, first stop and unplug before clearing.
12. After use, unplug and dismantle
13. Always switch off and unplug before cleaning. Please refer to the instruction in the “cleaning & maintenance”.

To use Potato Masher Attachment

1. Fit the motor unit inside the potato masher shaft, turn and lock until you hear a slight click. The marks on the power handle and potato blender shaft should now be aligned with each other. If this is the case, the potato blender shaft is locked correctly.
2. Check if the power cord is not damaged .
3. Make sure your electricity supply is the same as the one shown on the power handle.
4. Ensure potatoes are adequately cooked for easy mashing. you mash potatoes in a separate bowl or directly in the pan.
5. Plug in, adjust the desired setting. Hold the motor unit firmly.
6. Switch the appliance on by pressing the switch.
7. Mash the potatoes by moving the appliance slowly up and down and in circles
8. After you have completed mashing, Release the switch button, then unplug from outlet.
9. **Warning**: 30 seconds should be more than enough time for mashing application.
10. After use, unplug and dismantle
11. Always switch off and unplug before cleaning. Please refer to the instruction in “Cleaning & Maintenance”.

The potato macher attachment can also be used for carrots, parsnips, turnip or pretty much any fruit or vegetable that can be cooked in this manner!

Speed Guide

It’s up to you! You will figure out which is best with use, but as a guide: Use higher speed when using potator masher attachment (it is geared down anyway). Use lower speeds when using blender attachment on soups, sauces etc

SP10090_IM.indd 5 17/09/2014 10:56

CLEANING & MAINTENANCE

CLEANING

- This is best done immediately after use
- Switch off and unplug the appliance
- Remove attachments to warm, soapy water. Rinse and dry thoroughly. **TIP**: Use a nylon brush to clean/unclog the blades to prevent touching as they are very sharp!
- Never use metal or abrasive cleaners. Never use strong chemical cleaners
- The Motor Unit can be cleaned by wiping down with a soft cloth moistened in a mild detergent solution. NEVER IMMERSE THE BASE UNIT IN WATER OR RUN IT UNDER THE TAP

SP10090_IM.indd 6 17/09/2014 10:56

DOCUMENTATION

We Swan Products Ltd declare that this product conforms to the following product legislation in accordance with the following directive(s):

2004/108/EC The EMC Directive (the Electromagnetic Compatibility Directive).
2006/95EC. The LVD Directive (Low Voltage Directive).
2011-65-EU. The RoHS directive (Restriction of Hazardous Substances Directive)
EC 1935/2004 Food Contact

WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials of workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.

BS PLUG

The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red. WARNING: THIS APPLIANCE IS DOUBLE INSULATED. DO NOT CONNECT ANY WIRE TO THE EARTH PIN

DISPOSAL OF UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items. Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

SP10090_IM.indd 7 17/09/2014 10:56

www.swan-brand.co.uk

Scan this QR code to hear about our story

We love what we do

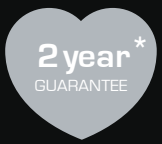

we're proud of our quality

Find us on Facebook

* on selected products

Copyright © Swan Products Ltd.
PO Box 3117, Stoke-on-Trent ST4 9GD